 



MF120

INSTRUCTIONS


1.

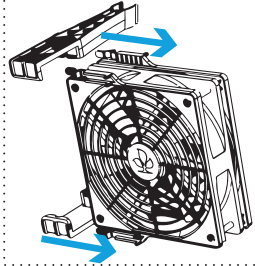

 
2.

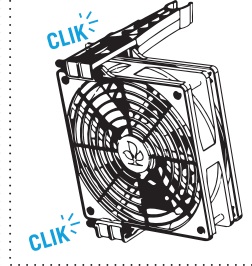

 
3. Option 15°

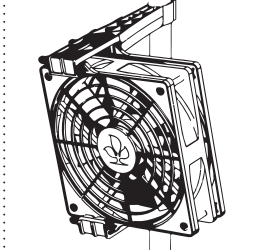

 
3. Option -15°

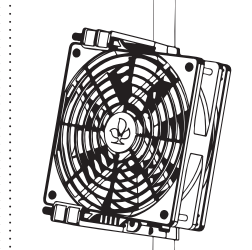

 
4. Cable position

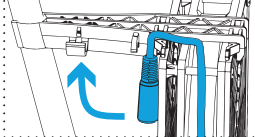

 5.

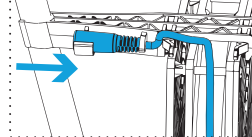

 
6.

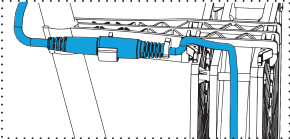


MF2X120

INSTRUCTIONS

 
1.

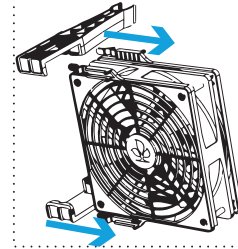

 
2.

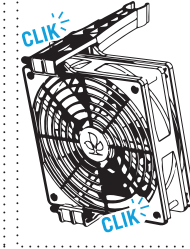

 
3. Option 15°

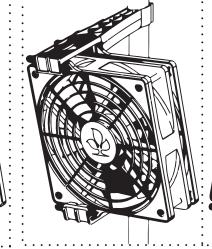


Option -15°

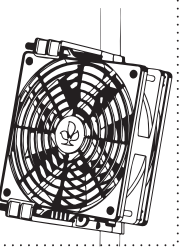 

 
4. Opposite

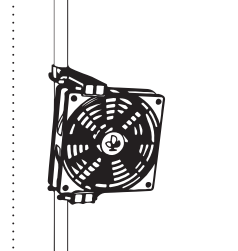

 
5. Air Circulation

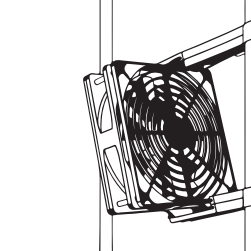

 
5. Air Circulation

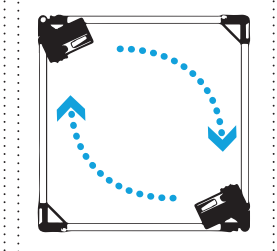

 6. Cable position

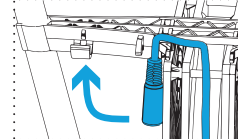

 7.

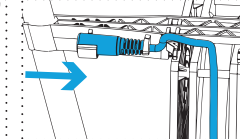

8.

